



## USE


To remove cement based grouts.

Ideal for repair Jobs (substitution of broken tiles) and renovations.

## FUNCTIONAL CHARACTERISTICS

RE-SHARPENABLES teeth made of tungsten carbide. Better performance.

Re-sharp only the front side of the blades.

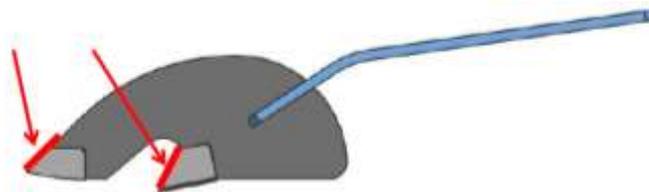

**ATTENTION:** Do not change the incisión angles!

First tooth guides while the second one removes the grout. Front tooth is also used to remove grout on corners.

[www.rubi.com](http://www.rubi.com)



## TECHNICAL SPECIFICATIONS

- Stroke length: 2 mm.
- Working thickness:

Ref. 66810 – For 1.5 mm. grout (Do not use with speed higher than 6,500 b.p.m).

Ref. 66811 – For 2 mm. grout.

Ref. 66812 – For 3 mm. grout.

Ref. 66813 – For 4 mm. grout.

## PACKAGING

Transparent PVC blister with full colour carton.

Blister dimensions: 47x151x22 cm.

Blister weight:

Ref. 66810: 45 gr.

Ref. 66811: 63 gr.

Ref. 66812: 75 gr.

Ref. 66813: 76 gr.

Sales unit: 1 unit.

[www.rubi.com](http://www.rubi.com)